


THIS TOOL IS DESIGNED TO REMOVE **FEMALE (SLEEVE) AND MALE (PIN)** WEATHER PACK TERMINALS FROM CONNECTORS.

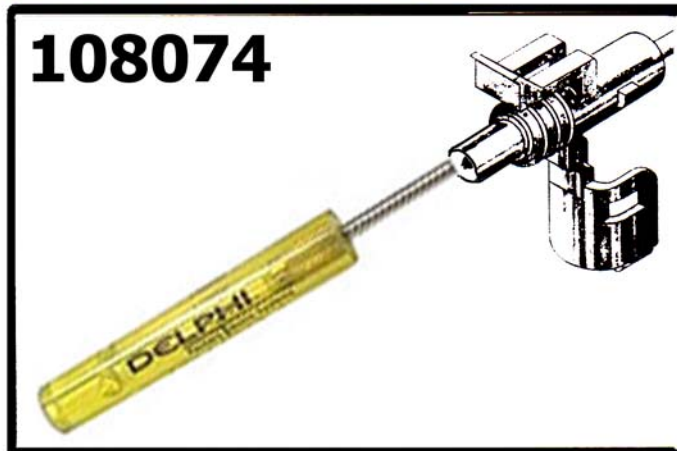

1. **OPEN SECONDARY LOCK.**
2. GRASP THE LEAD AND **PUSH** THE TERMINAL FORWARD.
3. INSERT THE TOOL STRAIGHT INTO THE **FRONT (MATING END)** OF CONNECTOR CAVITY UNTIL IT RESTS ON CAVITY SHOULDER.
4. **WHILE HOLDING TOOL SECURELY IN PLACE**, GRASP THE LEAD AND PUSH IT THROUGH CONNECTOR CAVITY INTO THE WEATHER PACK TOOL.
5. TERMINAL TANGS WILL DEPRESS AND TERMINAL WILL BE UNSEATED. **NEVER USE FORCE** TO PULL TERMINAL OUT OF CONNECTOR.
6. **LOOK** FOR TERMINAL AND CONNECTOR DAMAGE. REPLACE IF NECESSARY. (EXAMPLES: TERMINAL OR LOCK TANG IS BENT OR SMASHED. CONNECTOR IS CHIPPED OR DEFORMED, PREVENTING TERMINAL FROM REMAINING SEATED.) **NOTE:** WHEN RESEATING EXISTING TERMINAL ASSURE LOCK TANG(S) ARE LIFTED TO RESEAT PROPERLY.
7. **CLOSE SECONDARY LOCK.**