

INSTALLATION INSTRUCTIONS

102015 TPS-TEC THROTTLE ENHANCER

1987-1992 GM WITH WEATHERPACK CONNECTOR



1. REMOVE CONNECTOR FROM TPS BY PRYING UP ON LOCKING CLIP.

2. INSERT TPS-TEC CONNECTORS BETWEEN EXISTING CONNECTIONS OF CAR WIRING AND TPS.

THROTTLE POSITION SENSOR (TPS)

3. TURN IGNITION KEY TO "ON" BUT DON'T START CAR. "STANDBY" LED SHOULD BE ILLUMINATED.

4. MOVE THROTTLE AS IF YOU WERE ACCELERATING VEHICLE. THE "ENHANCE" LED INDICATOR SHOULD ILLUMINATE.

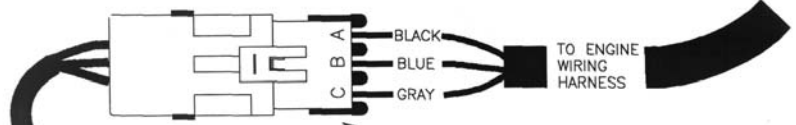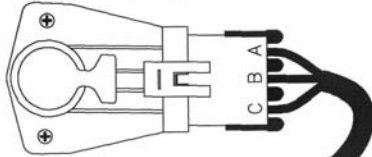


TPS CONNECTOR

BE SURE WIRE IN POSITION "A" IS A BLACK WIRE!

102015

© ENHANCE TPS-TEC
® STANDBY TOP VIEW

VIN J 1984-1986
VIN M 1987-1990
VIN 9 1984-1988
VIN 8 1985-1989
VIN D 1990
VIN L 1985-1987
VIN E 1988-1992
VIN R 1986-1990
VIN H 1987-1989
VIN K 1987-1992
VIN N 1987-1992
VIN H 1986-1992
VIN B 1987-1990
VIN Z 1985-1987

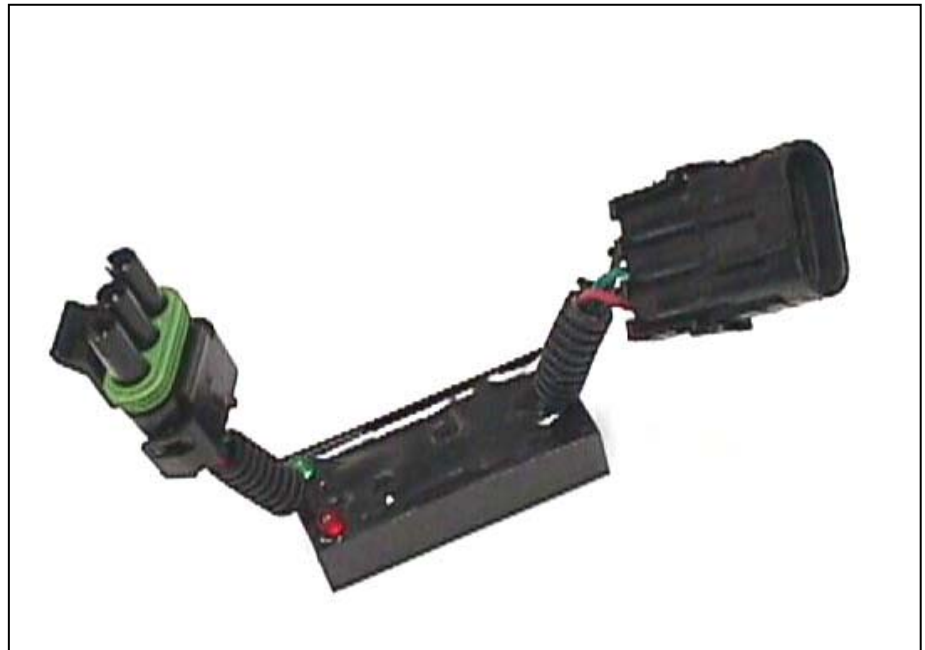

ALWAYS CONFIRM ENGINE CODE ABOVE ON VIN NUMBER OF CAR