


INSTALLATION INSTRUCTIONS

102065 MAT INSTALLATION KIT

1984-1985 ENGINE WITH 1987 ECM

INSTALLATION OF THE MAT SENSOR WIRE INTO THE 1984-1985 REGAL WIRING HARNESS TO FACILITATE 1987 ECM USAGE

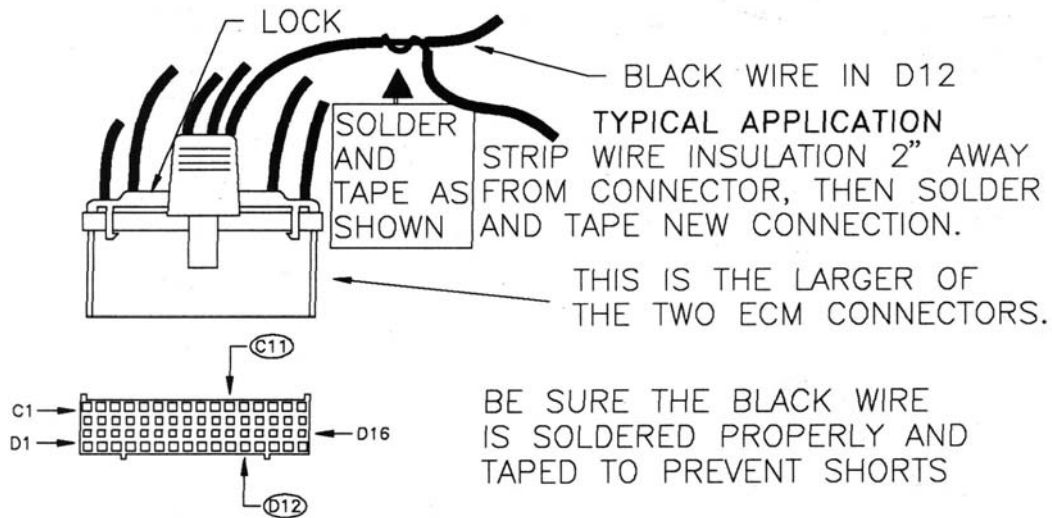

SOLDER THE BLACK WIRE OF THE NEW MAT SENSOR WIRING TO THE BLACK WIRE IN LOCATION D12 AS SHOWN. REMOVE THE TERMINAL LOCK ON THE "C" SIDE AND INSERT THE TERMINAL OF THE BROWN WIRE INTO LOCATION C11.



NOTE: Air Temp Sensor is included in this kit. You must drill a 3/8" hole in the rubber collar of the air filter and insert this sensor into the drilled hole.